




# Wallace Cranes

## Safety Tag and Label Locations

### Safety Tag Location

The following sketch shows the location of required safety tags on Wallace Tri-Adjustable Gantry Cranes. All locking pins or pins with a quick release must have a corresponding Tag 1969. Following the schematic below is a complete listing of all text found on all Labels and Tags on the Crane.

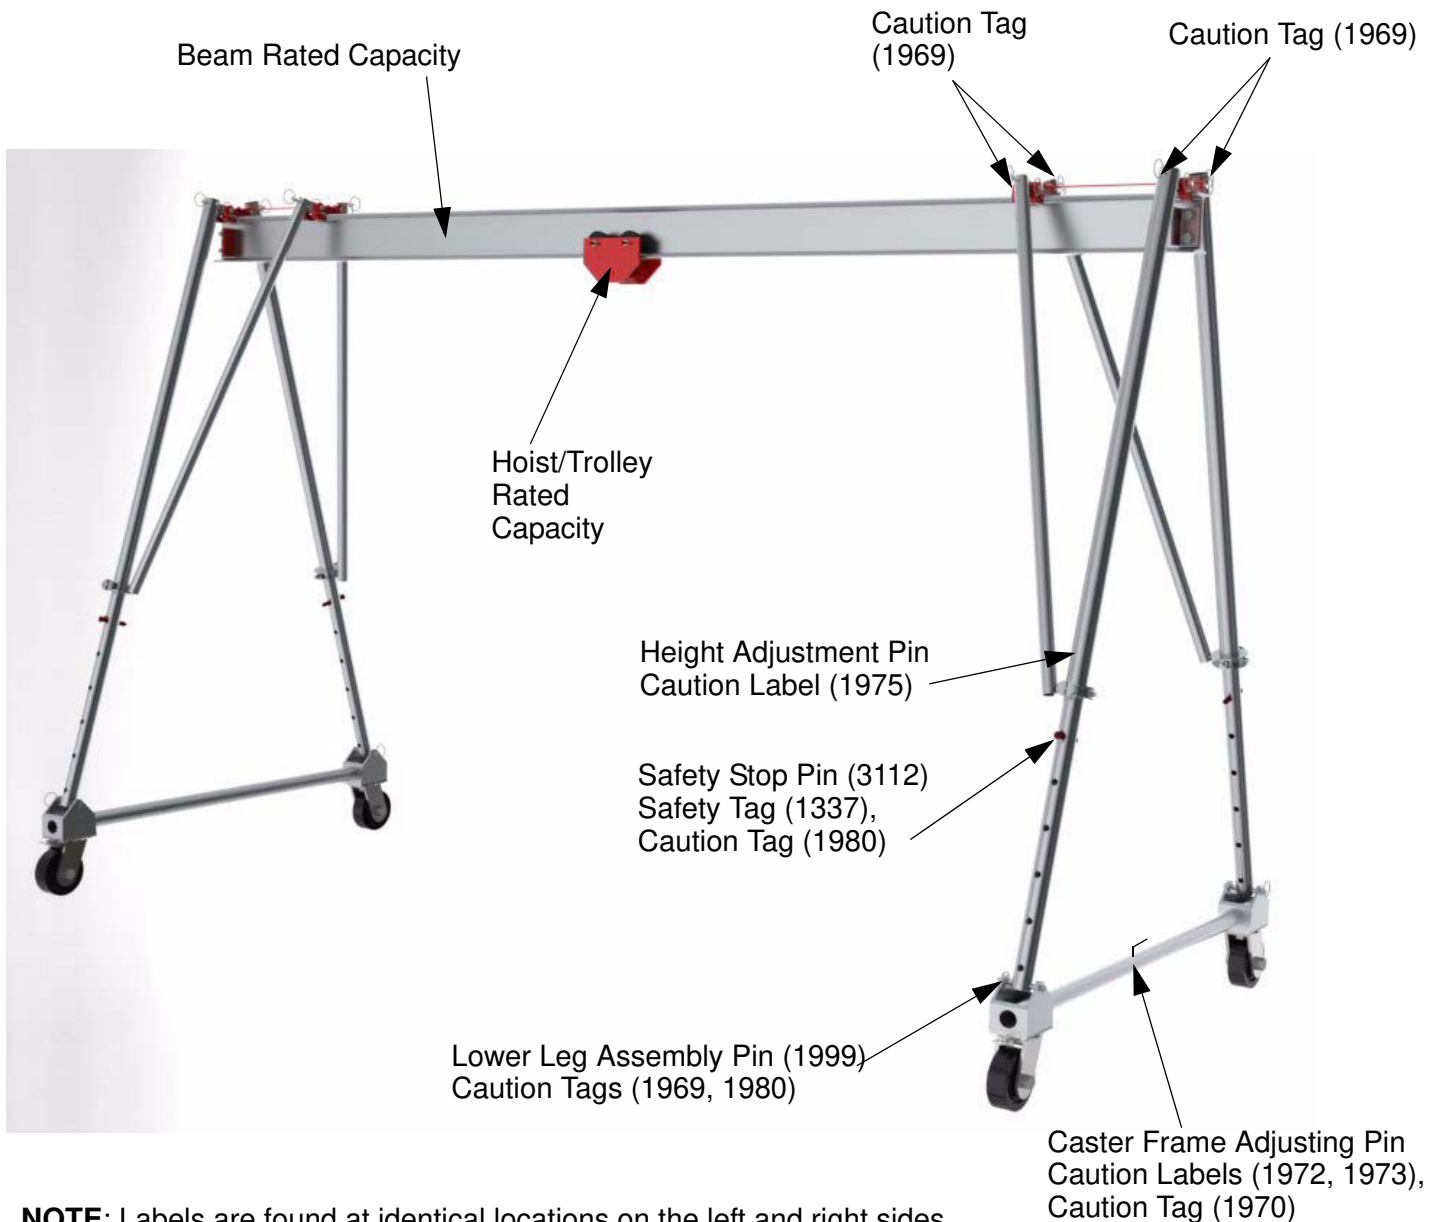

## Caution Labels 1973, 1975

1973/R05

### **CAUTION**

1. Read and understand instructions before using this gantry.
2. Inspect gantry thoroughly before using (see Form 379) for damaged or missing parts.
3. Do not lift more than rated capacity.
4. Center hoist over the load.
5. Do not allow load to swing or to roll against any supporting members.
6. When moving gantry under load push on the gantry, not the load. Be certain that rolling surface is hard, level, clean and smooth.
7. Do not move gantry over 50 feet per minute (1/2 mph).
8. Not to be used for lifting or supporting humans.

**REQUEST FREE REPLACEMENTS IF THIS OR ANY OTHER GANTRY LABELS OR INSTRUCTIONS ARE DAMAGED OR MISSING.**

**MFG. UNDER ONE OR MORE OF THE FOLLOWING PATENTS.**

**U.S. PAT. NOS. 2,896,982; 2,990,788; 3,826,196; 4,041,875 PAT'D. IN CANADA 654,486 (1962), 926,822 (1973).**

**AND OTHER U.S. CANADIAN AND FOREIGN PATS. PEND.**

**B. E. WALLACE PRODUCTS CORP.  
FRAZER, PA 19355  
www.wallacecranes.com**

1975/R05


### **CAUTION**

**FOLLOW INSTRUCTIONS BELOW BEFORE PULLING THIS LOAD BOLT. GANTRY WILL NOT STAND ON 3 LEGS - INJURY COULD RESULT FROM GANTRY COLLAPSING.**

**SEE "OPERATING AND SAFETY INSTRUCTIONS" (Form 379) FOR COMPLETE INFORMATION. ADJUSTING HEIGHT WHEN THIS LEG IS USED IN A WALLACE ADJUSTABLE GANTRY:**


1. Do not make adjustments when the unit is under load.
2. Secure Trolley and Hoist to prevent rolling to low end of beam.
3. Securely support the I-Beam externally (or use Wallace Gantry Jack).
4. Extend caster frame for greatest stability.
5. Lock casters parallel to I-Beam.
6. Install the Safety Stops (one per leg) before pulling load bolts. They limit downward leg travel - see instructions on tags attached to stops.
7. Raise upper leg slightly to release the load bolt, then pull out and rotate 90° (or pin where applicable) to "lock out" position.
8. After adjusting height, turn back to unlock. Be certain all load bolts are fully engaged.
9. Relocate safety stops with tags.

**B. E. WALLACE PRODUCTS CORP.  
FRAZER, PA 19355  
www.wallacecranes.com**

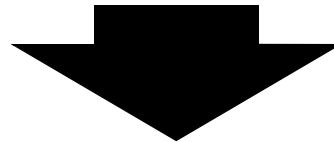

# Caution Label 1972, Caution Tags 1969, 1970, 1980

1972/R05



**CAUTION**


FOLLOW INSTRUCTIONS BELOW  
BEFORE REMOVING THIS TREAD  
ADJUSTMENT PIN

SERIOUS INJURY COULD RESULT FROM  
COLLAPSE OF GANTRY AND/OR  
MOVEMENT OF LOAD.

1. Do not make adjustments when the gantry is under load.
2. Secure Trolley and Hoist to prevent rolling to low end of I-Beam.
3. Make certain the restraining cable is secured in place (inside or outside of the tubes, depending on model).
4. Securely support the I-Beam externally or:
  - a. Use Wallace Gantry jack to adjust in accord with instructions on jack and in Form 379.
  - b. Or use lever type winch or block and tackle, etc., to adjust tread in accord with instructions in Form 379.
5. Remove the tread adjusting pin and adjust as required. Replace the tread adjusting pin and secure with locking pin.

**B. E. WALLACE PRODUCTS CORP.**  
FRAZER, PA 19355  
www.wallacecranes.com

1969



**CAUTION**

DO NOT REMOVE  
THIS LOCKING PIN  
GANTRY COULD  
COLLAPSE --  
INJURY CAN RESULT

Only remove to  
disassemble gantry after  
I-Beam is securely  
supported externally.  
See Mfrs. instructions for  
assembly/disassembly.

**B. E. WALLACE  
PRODUCTS CORP.**  
FRAZER, PA 19355  
www.wallacecranes.com

Front/Rear identical  
on Tag 1969


1970




**CAUTION**

Only remove this locking pin  
when adjusting caster  
frame spread.  
Read instructions  
on label 1972.  
After making adjustment,  
replace this locking pin to  
secure tread adjustment pin.

**B. E. WALLACE  
PRODUCTS CORP.**  
FRAZER, PA 19355  
www.wallacecranes.com

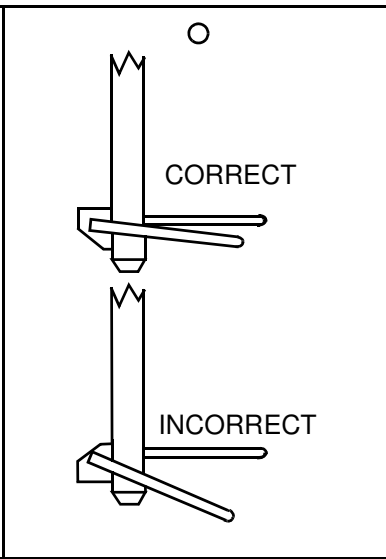

1980




**CAUTION**


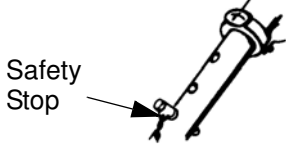

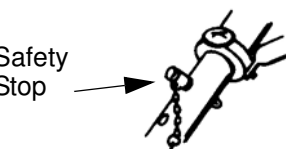
DO NOT REMOVE  
THIS LOCKING PIN  
GANTRY COULD  
COLLAPSE --  
INJURY CAN RESULT

Only remove to  
disassemble gantry after  
I-Beam is securely  
supported externally.  
See Mfrs. Instructions for  
assembly/disassembly.

**B. E. WALLACE  
PRODUCTS CORP.**  
FRAZER, PA 19355  
www.wallacecranes.com

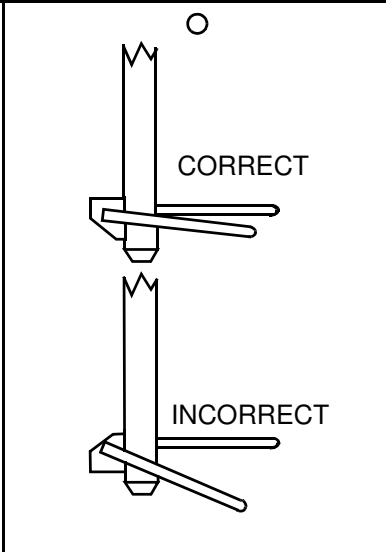

# Tag 1337

<p>1337 R05</p> <p> <b>CAUTION</b></p> <p> Safety Stop →</p> <p><b><u>LOWERING GANTRY</u></b> Place safety stop 3 holes or fewer below upper leg. Lower leg 2 holes maximum. Repeat as required. <u>See other side for raising.</u></p> <p><b>B. E. WALLACE PRODUCTS CORP. FRAZER, PA 19355 www.wallacecranes.com</b></p>	<p> <b>CAUTION</b></p> <p> Safety Stop →</p> <p><b><u>RAISING GANTRY</u></b> Place safety stop 1 hole below upper leg casting. Raise leg 2 holes maximum. Repeat as required. <u>See other side for lowering.</u></p> <p><b>B. E. WALLACE PRODUCTS CORP. FRAZER, PA 19355 www.wallacecranes.com</b></p>
---	---

Front of Tag

Rear of Tag

